




# Cleaning instructions

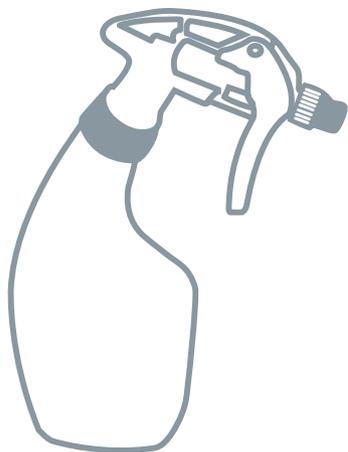


Use general cleaning agent with ammonia for windows. The agent may not contain alcohol or other solvents.

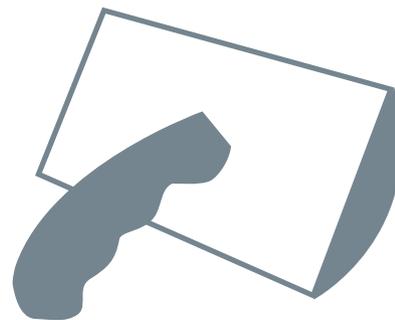

Use a painting pad for cleaning and wiping. Add the cleaning agent to the pad until lightly moistened. Wipe with a dry pad until the screen is completely dry.

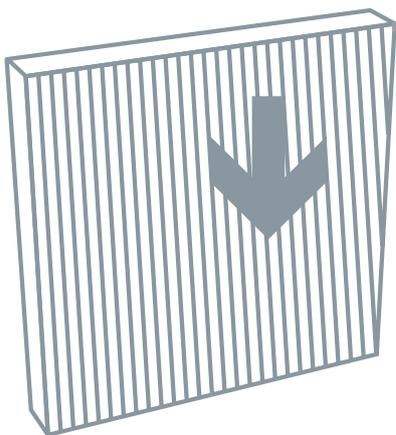

Move the painting pad in the direction of the profiles. Front side (lenticular profile) up and down. Work the cleaning agent into the profiles. Same procedure for wiping dry.

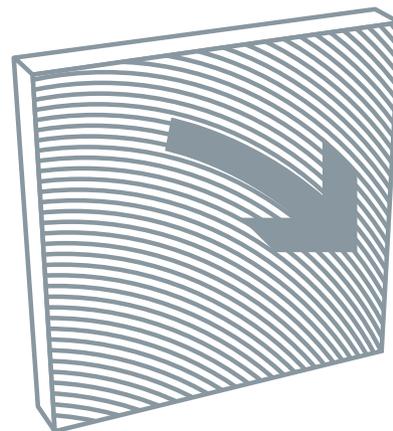

Work back side (single screen) in circular movements (fresnel). Same treatment as for front.

# Cleaning instructions for dnp acrylic screens

## Slightly dusted screen

If the screen is only slightly dusty, dusting with a feather duster or similar will suffice. Light vacuum cleaning is recommended using a fitting with bristles which are not too soft, but which must not scratch (preferably new).

The brush should be moved in the direction of the grooves, i.e. up and down on the front (lenticular profile), and on the back in the case of single screens in circular movements from the center (Fresnel profile) or just from side to side (two element screens with vertical lens).

## Dirty screen

If the dirt on the screen is heavier, possibly with stains from fingers etc, the screen may be cleaned with an ordinary window cleaner with ammonia (not alcohol). Cleaning is best done with a painting pad (not a brush).

Add cleaning agent to painting pad until lightly moistened. Move the pad in the direction of the profile. The whole screen must be treated, as a difference will otherwise appear between treated and untreated areas.

## Wiping off the screen

When the liquid has been distributed and worked well into the grooves, the screen must be wiped dry. This is best done with another dry painting pad. Wipe the screen in the same manner as used for the cleaning. If the pad becomes too wet, wipe it with water-absorbent paper. It is important that the screen should be completely dry after treatment. Repeat treatment as required.

A hair dryer can be useful, but it must be held at a proper distance from the screen and if it has more than one heat setting, it is advisable to keep it at the lowest setting.

Should the above treatment prove inadequate, please contact your dnp distributor or dnp denmark.

## Warning!

Never use cleaning agents with solvents as these may destroy the screen. Also, never rub hard or persistently on the screen in order to remove stains, as this will cause deformations in the surface which will appear as stains.

If the cleaning agent needs thinning down, only lime-free water may be used.

NB.

This cleaning instruction can NOT be used for the dnp Black Bead Screen. Please see separate guideline.