




# Supernova™ One

## Installation manual


## Box contents

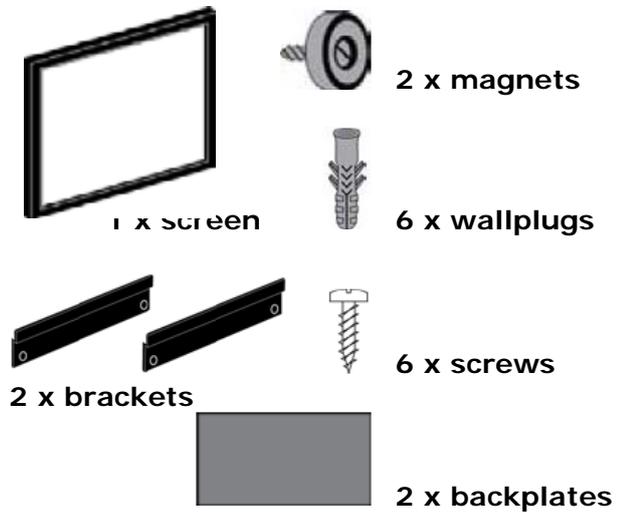

### Check box for:

- 1 x screen
- 2 x brackets
- 2 x magnets Ø 25 mm
- 6 x wallplugs  
(2 for magnets, 4 for brackets)
- 6 x screws  
(2 for magnets, 4 for brackets)
- 2 x backplates


## 1. Position the projector

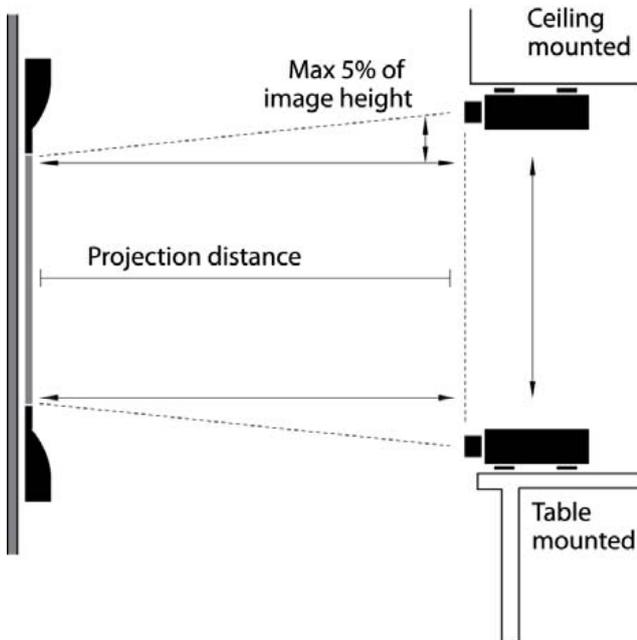

For the shortest optimal projection distance, see "minimum projection distance" in the Supernova One datasheet. It is possible to use a longer projection distance, but make sure that the projector can project the required image size onto the screen. In case of a mismatch, contact your projector reseller.

The projector can be positioned freely on a vertical centreline, perpendicular to the screen, up to 5% above (ceiling mounted) or up to 5% below the image area (table mounted).


## 2. Position brackets

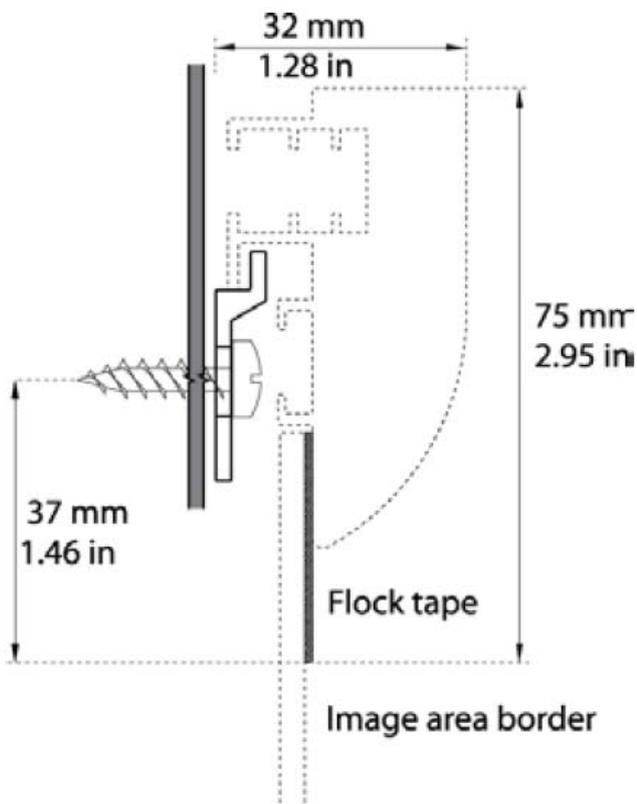

Place the screws 37 mm (1.46 in) above the desired image area's top border. Position the brackets approx. 150 mm (5.91 in) from the outer edge of the frame.


The brackets must be aligned both horizontally and vertically. If the wall is uneven, you can, for example, apply a few washers behind the brackets to enable alignment. Use attachment screws and wall plugs that are appropriate for the wall material.

### 3. Mount the backplates

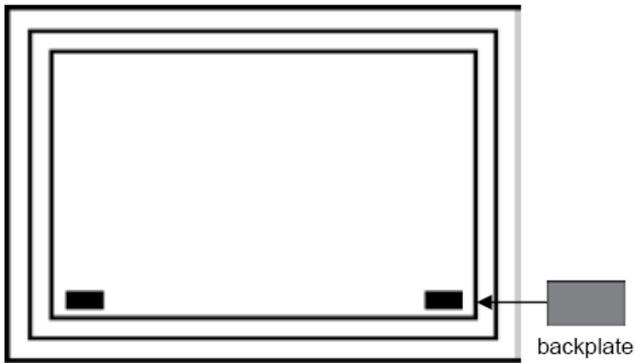


The backplates ensure that the screen is fixed firmly to the wall. Remove the covering from the tape and glue the two plates into position in each lower corner of the screen's back side. If the wall is uneven, you may have to find a more suitable position than the lower corners.

### 4. Place the magnets

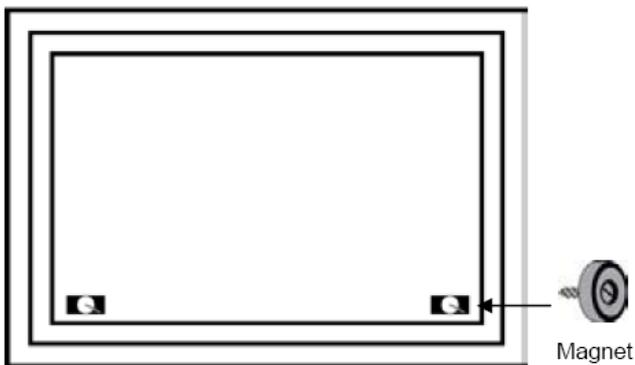

Put a screw into each of the magnets and attach them to the centre of each of the two backplates by using magnetic force (screw tips should face away from the screen).

## 5. Mount the screen

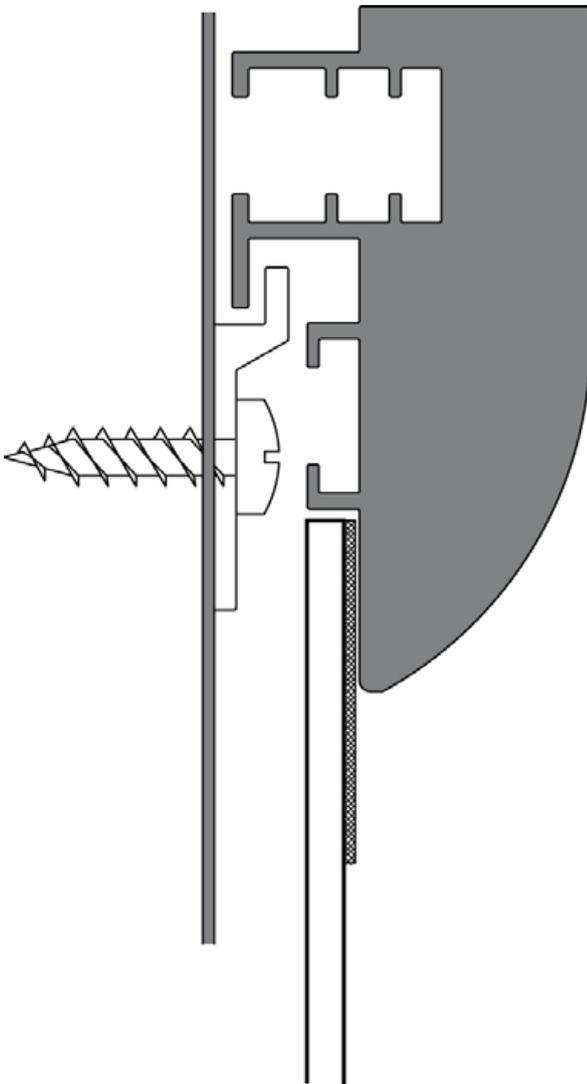

Lift the screen up against the wall, slightly higher than the brackets. Then let it slide down on the brackets until they are firmly in position. Only tilt the screen slightly during this operation, as it can loosen the brackets.

Now press the lower part of the screen lightly into the wall, so that the screws on the magnets leave a mark on the wall. Remove the screen, drill a hole where the marks were made and mount the magnets in the wall using wall plugs and screws.

Remount the screen following the previous procedure. If there is no contact between the screen and the magnets, remove the screen again and slightly unscrew the magnets. The optimal horizontal position of the frame can be reached by sliding the frame horizontally on the brackets.

# Warranty

## Limited warranty – valid only in the United States

dnp denmark warrants this product against defects in material and workmanship for the time and periods as set forth below. Pursuant to this Limited Warranty, dnp denmark will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a refurbished product. In the event of a defect, these are our exclusive remedies. For purposes of this Limited Warranty, “refurbished” means a product or part that has been returned to its original specifications.

**Labour & Parts:** For a period of one (1) year from the original date of purchase of the product, dnp denmark will, at its option, repair or replace with new or refurbished products or parts, any product or parts determined to be defective.

**Instructions:** To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the dnp denmark authorized dealer or reseller. A dated purchase receipt is required.

**Repair / Replacement Warranty:** This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or products replaced under this Limited Warranty will become the property of dnp denmark.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the dnp denmark product.

This Limited Warranty does not cover dnp denmark products sold as is or with all faults. This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product.

**Limitation on Damages:** dnp denmark shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on this product.

**Duration of Implied Warranties:** Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The contents of this manual are courtesy of dnp denmark as. Text and photos may not be copied or reproduced without approval from dnp denmark

> **dnp denmark as**  
**Skruegangen 2**  
**DK-2690 Karlslunde**  
**Denmark**

> **Phone +45 4616 5100**  
**Fax +45 4616 5200**  
**[www.dnp.dk](http://www.dnp.dk)**  
**[dnp@dnp.dk](mailto:dnp@dnp.dk)**